



## City-Com Communications

35 Crawford Crescent, Unit Six (Main Floor), PO Box 100 Campbellville, ON L0P 1B0

Telephone: 1-888-248-9266 Email: [service@citycomgt.com](mailto:service@citycomgt.com)

### How to change the time on a Panasonic 12/32 System

To change the time on the phone system please follow the instructions below.

1. From a 24-button phone (KX-TD7230, KX-TD7430, KX-T7433) which is usually the main reception set, courtesy set or extension 101 press the 'PROGRAM' key on the left side of the LCD screen
2. Dial the system program password or (\* \* 1 2 3 4)
3. SYS-PGM NO? will appear on screen
4. Dial 000
5. Press the key directly under 'NEXT' on the screen **twice**
6. Change the first digit of the time
7. Press the 'AUTO DIAL/STORE' key located below the volume control key
8. Press the 'HOLD' key
9. Press the 'PROGRAM' key to end