



City-Com Communications

35 Crawford Crescent, Unit Six (Main Floor), PO Box 100 Campbellville, ON L0P 1B0

Telephone: 1-888-248-9266 Email: service@citycomgt.com

How to change the time on a Panasonic TDA/TDE System

To change the time on the phone system please follow the instructions below.

1. From a 24-button phone (KX-TD7630, KX-TD7633, KX-DT543 or KX-DT343) which is usually the main reception set, courtesy set or extension 101 press the 'PROGRAM' key on the left side of the LCD screen then * * 1, 2, 3, 4
2. Enter program 000 then press 'ENTER'
3. Press the button under the word 'NEXT' or the SPEAKERPHONE button until you see the time displayed.
4. Enter the correct hour
5. Press "FORWARD/DND" button to advance to the AM/PM option
6. Press 'MUTE' to select AM or PM
7. Press the 'STORE' button
8. Lift and replace handset to exit the programming mode