Business Mobility (IP) DECT

DECT G277/577 Handset

User Manual

NDA-31991
Issue 1.0

Date: May 2019

Great care has been taken to ensure that the information contained in this handbook is accurate and complete. Should any errors or omissions be discovered or should any user wish to make a suggestion for improving this handbook, they are invited to send the relevant details to:

NEC Nederland B.V.
P.O. BOX 32
1200 JD HILVERSUM
THE NETHERLANDS

© NEC Nederland B.V. 2019
All right are reserved. Reproduction in whole or in part is prohibited without the written consent of the copyright owner. All brand names and product names in this document are trademarks or registered trademarks of their respective companies.

Disclaimer

NEC reserves the right to revise or make changes or improvements to the products described in the user manual or to this user manual itself at any time without obligation to notify any person of such revision or improvements.

Revision history

May, 2019

First version

Contents

Contents

Introduction 10
Notice on the use of the handsets 10
SOS functions 10
Getting started 11
Installing the battery pack 11
Installing the charger 11
Charging the batteries 12
Charging a spare battery 12
Charging guidelines 12
Charging and operating times 12
Charge display 13
Handset keys and display areas 14
Handset keys 15
Display 17
Icon line 18
Time & Date area 19
Dialogue area 19
Idle mode 19
Call mode 19
Dialogue mode 20
Menu mode 21
Edit mode 21
Soft key line 23
Used notation in this manual 24
General functions 27
Switching the handset on 27
Switching the handset off 27
Key lock 27
Locking 27
Unlocking 27
Call features 28
Make a call 28

Dialling a number 28
Using Predial mode 28
Using Central or Private Directory[1] 28
Using Speed dial 29
Making an emergency SOS call (G577) 29
Answering a call 29
Answering a call in Normal mode 29
Answering a call using any key 29
Auto-answering mode 30
Muting the ringer of an incoming call 30
Rejecting an incoming call 30
Change settings during a call 30
Adjusting the headset or loudspeaker volume 30
Using mute during a call 30
Transferring a call 31
Dialling second destination then transfer 31
Using Private or Central Directory then transfer 31
Shuttle the call 32
Calls list 33
Actions on the calls lists 34
Open Calls list 34
Checking the details of a call 34
Dialling the number of the call list entry 34
First edit then dial the number of the call list entry 35
Transferring a name/number to your contacts list 35
Add a number to an existing contact 37
Transferring a number to the caller filter list 38
Deleting an entry 38
Deleting all entries 39
Contacts 40
Adding a new contact 40
Changing information of a contact 41
Deleting a contact 41
Deleting all contacts 42
Speed dial feature 42
Adding, replacing or deleting a speed dial contact 43
Adding contact to the caller filter list 44
Messaging (G577) 45
Normal, urgent and emergency messages 45
Normal messages 45
Urgent messages 45

Emergency messages 45
Confirming receipts 46
Message list full 46
Message Menu Sections 46
Open Message menu section 47
Actions on the messages 47
Reading a message 47
Writing and saving a new/draft message 48
Writing and sending a new/draft message 48
Forwarding a message 51
Replying to an incoming message 51
Deleting a message 52
Deleting all messages 52
Saving sender to the contacts list 53
Add sender to existing contact 53
Message settings 54
Calendar (G577) 55
Open the Calendar 55
Changing the calendar format (week or month view) 55
Open schedule for today 55
Open schedule for a given date 55
Adding an appointment 56
Open appointment 58
Editing an appointment 58
Copying an appointment 59
Deleting an appointment 59
Additional features (Accessories) (G577) 60
Calculator 60
Stopwatch 61
Alarms (alarm clock) 62
Open Alarms 62
Assigning or change a daily alarm 62
Turning off a daily alarm 62
Assigning or change a recurrent alarm 63
Turning off a recurrent alarm 63
Setting snooze time 64
Telephone settings 65
Open Settings menu section 65
General settings 66
Setting Silent 67
Setting the time and date 67

Setting the language 69
Configuring shortcuts 69
Configuring the LED signal 70
Security options 71
Setting the Phone lock feature 71
Setting the Automatic keypad lock feature 72
Changing the PIN code 72
Changing the Proxy password 73
Defining the handset name 74
Resetting settings 74
View status information 75
Sounds (normal & silent) settings 76
Incoming call 78
Message notifications 80
Setting the notification volume 80
Setting the notification melodies 84
Setting the increasing notification feature 84
Setting the vibrator feature 85
Alerts 86
Feedback 88
Display settings 90
Selecting Wallpaper 90
Selecting startup screen 91
Configuring power save 91
Calls settings 93
View statistics information 94
Answer mode configuration 94
Caller filter configuration 95
Configuring emergency or SOS calls (G577) 100
Assigning emergency call number 100
Assigning an emergency message 102
Assigning the Silent charging feature 102
Defining the missed call time 103
Voicemail 103
Assigning the Voicemail number 104
Connectivity settings 105
DECT system selection 105
Bluetooth settings (G577) 106
Enable Bluetooth 106
Disable Bluetooth 107
Pairing a Bluetooth headset 108
Connecting a paired Bluetooth headset 108

Disconnecting a paired Bluetooth headset.....109
Renaming a paired Bluetooth headset.....110
Retrieve information for a paired Bluetooth headset.....111
Delete a paired Bluetooth headset.....112
Delete all paired Bluetooth headsets 113

Introduction

Also refer to the following documents:

- Additional Information Sheet
- G277/577 Quick Reference Guide

Notice on the use of the handsets

Like all cordless telephones, the G277/577 DECT handset uses radio signals, which do not guarantee a connection under all circumstances. Do not rely exclusively on the DECT handsets when making indispensable calls (such as medical emergencies).

SOS functions

The SOS functions of the G577 do not replace companion supervision by a colleague or other people. In case of critical, emergency or life-threatening situations make sure that other persons are present or that appropriate measures are taken.

Getting started

Installing the battery pack

1. Place the handset face down on a flat surface.
2. Slide the lock at the bottom of the battery compartment cover upwards and at the same time lift the cover away from the handset.
3. Remove the battery compartment cover.
4. Push the battery pack into the casing.
5. Replace the battery cover.

Installing the charger

1. Place the charger on a flat surface.
2. Connect the USB-C connector of the USB cable to (the back of) the charger.
3. Connect the type A USB connector to the USB AC/DC Adapter.
4. Connect the adapter to an electrical outlet.
5. Place the handset on the charger as shown in Figure 1.

Figure 1: G277/G577/G577h in Desktop Charger

Charging the batteries

Place the handset in the charger as shown in Figure 1. For a few seconds the display of the handset shows:

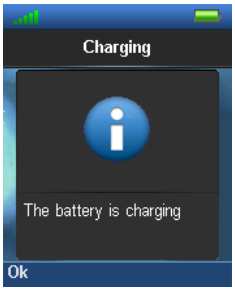

Figure 2: Battery charging display

Attention:	The handset, if switched off, automatically switches on when placed in the charger.

Charging a spare battery

The G277/577 Spare Battery Desktop Charger can be used to charge a spare battery pack for the G277/577. To charge a spare battery pack:

1. Place the spare battery pack in the spare battery charging slot compartment. (Upside down and with text on the battery pack facing to the front.)
2. Slide the spare battery pack under the plastic holder to keep it in place.

Charging guidelines

Please read the concerning section in the DECT Handsets – General Information Guide carefully!

Charging and operating times

Discharged batteries require 7 hours (using the spare battery slot might take longer) to completely recharge. Completely charged batteries provide the handset with up to 20 hours of talk time and 160 hours of standby time.

Charge display

The battery charge status appears on the top of the display screen:

Table 1: Battery charge status icons

Icon	Charge status
	Almost empty
	Less than 10%
	10% to 20%
	20% to 90% (the bigger the green bar, the higher the charged percentage)
	Fully charged (more than 90%)

When the battery is nearly discharged a warning beep sounds and, when not in a call, the display shows:

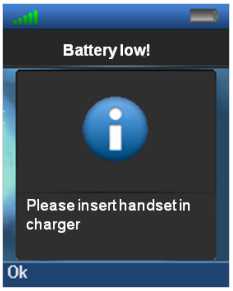

Figure 3: Battery low display

You cannot make calls while this message appears.

Handset keys and display areas

Figure 4: Elements of the G277/577 (Front View)

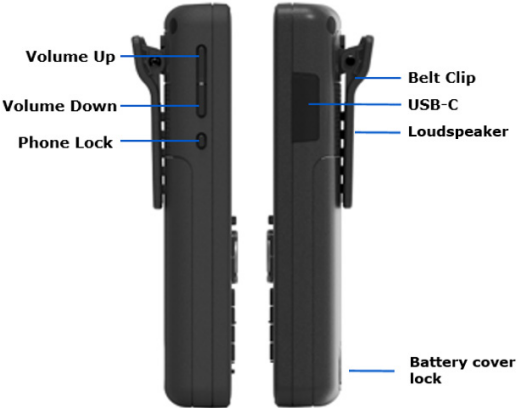

Figure 5: Elements of the G277/577 (Side Views)

Handset keys

Table 2: Keys of the Handset

Key		Description
LEFT SOFT KEY		Key related to the action given on the bottom left of the display.
MIDDLE SOFT KEY		Key related to the action given on the bottom middle of the display.
RIGHT SOFT KEY		Key related to the action given on the bottom right of the display.
UP		Use the navigation keys to: – Select the required menu icon or menu element; – Navigate the cursor; – In some cases change (increase/decrease) a given value; – Access the shortcut assigned to it.
DOWN		
LEFT		
RIGHT		
OK		Used to acknowledge menu selection.
CALL		Used to go off hook and to initiate enquiry/hold/shuttle.
CLR		Use the Clear key to – Release a call;

Table 2: Keys of the Handset

Key		Description
		– Return to the previous step in a menu; – Switch your handset off (long press) – Switch your handset on.
SPEAKER		Used to go off hook and initiate enquiry using hands free.
MENU		Used to access main menu items.
SOS (G577)		Long press the SOS key to make an emergency call (if configured).
VOLUME UP		To increase the handset volume.
VOLUME DOWN		Decrease the handset volume.
1–9		Use **1** – **9** to – Insert a digit in a number; – Insert a character; – Select a **Speed dial** number
0		Use **0** to – Insert a 0 in a number; – Insert a character.

*		Use * to – Insert a * in a number; – Insert a character – Insert a decimal point (Calculator feature).

Table 2: Keys of the Handset

Key		Description
#		Use # to – Insert a # in a number; – Switch between **Normal** and **Silent** (sounds & alerts) settings by long pressing (more than 2 seconds) the key. – Toggle the character case (capital, lower case or digit) when in edit mode.
LINE KEY		Use one of the four Line keys to – Select a **Speed dial** number – Access the shortcut assigned to it.

Display

Figure 6 shows the four areas of the display:

- Icon line
- Time & Date area
- Dialogue area
- Soft key line

Figure 6: Display screen

Icon line

The icon line displays the status of the handset.

Table 3: Icon line icons

Icon	Description
	Level of radio signal (always shown)
	New text message received
	Voice message waiting indication
	Keypad locked
	Alarm set
	Missed calls
	Ring
	Ringer deactivated
	Caller filter active

	Pull cord activated
	USB connected
	Battery charge status Refer to Table 1 for Battery status icons.

Time & Date area

The Time & Date area is only shown in Idle mode and gives the current time and date. In any other mode this part of the display is added to the Dialogue area (see next).

Dialogue area

The Dialogue area displays information according to the operational mode of the handset:

Idle mode

In Idle mode, the dialogue area displays information like DECT system name, handset's DNR, and so on.

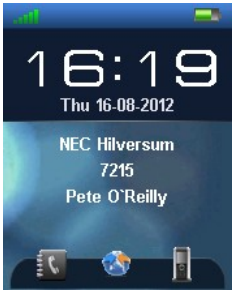

Figure 7: Idle mode screen

Call mode

In Call mode, the dialogue area displays information related to the call, like number and name of the calling/connected party and some status icons (see Table 4 and Table 5).

Table 4: Call Set-up icons

Icon	Description
	Incoming call *One to three green "circles" intermittently shown*
	Outgoing call *One to three blue "circles" intermittently shown*

Table 5: Call Conversation icons

Icon	Description
	Call in conversation *Call set-up by this phone*
	Call in conversation *Call set-up to this phone*
	Loudspeaker on
	Microphone muted while loudspeaker on
	Microphone muted while loudspeaker off

Dialogue mode

In Dialogue mode, the dialogue area displays dialogues regarding missed calls (see Figure 8), messaging, menu settings, warnings and so on (see for some examples).

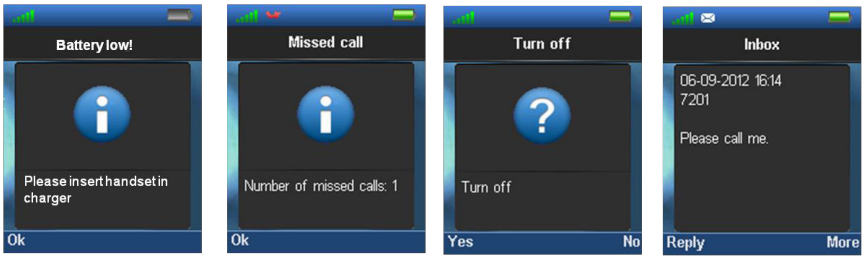

Figure 8: Examples Dialogue mode

Menu mode

In Menu mode, the dialogue area displays the menu icons or menu sections (tabs) and the specific menu items. E.g.:

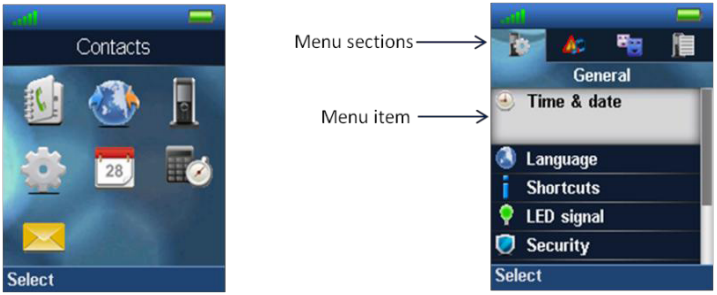

Figure 9: Main menu and General setting menu

Edit mode

In Edit mode, you can use the dialogue area to enter and edit digits (e.g., for numbers) and text, e.g., for contact information editing:

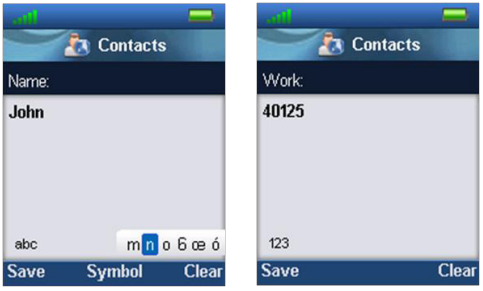

Figure 10: Contacts name and number editing

Table 6 shows the key to press to insert letters, numbers or symbols.

Besides the physical keys also the Symbol soft key is used in the Edit mode to insert (symbol) characters.

Table 6: key functions in text mode

Key	Uppercase	Lowercase
1	1 . ! ? , - ” @ + : :	1 . ! ? , - ” @ + : :
2	A B C 2 Æ À Á Â Ä Å Ç	a b c 2 æ à á â ä å ç
3	D E F 3 È É Ê Ë	d e f 3 è é ê ë
4	G H I 4 Í Î Ï	g h i 4 í î ï
5	J K L 5	j k l 5
6	M N O 6 Œ Ó Ô Ö Ø	m n o 6 œ ó ô ö ø
7	P Q R S 7 Š ß	p q r s 7 š ß
8	T U V 8 Ù Ú Û Ü	t u v 8 ù ú û ü
9	W X Y Z 9 Ÿ Ž	w x y z 9 ÿ ž
0	(space) 0	(space) 0
*	*	*
#	Toggle character case: Abc → ABC → abc → 123	
Symbol	. , ` ? ! ″ - ( ) @ / : _ ; + & % * = < > £ (space) $ ¥ ⁰ [ ] { } \ ~ ^ ¡ § ¿ # | □ □	

Soft key line

Soft keys appear below the handset dialogue area. The key functions change automatically according to the operational state of the handset.

Used notation in this manual

Main menu icons are used to indicate selection of the appropriate menu.

To select the appropriate main menu item use the **NAVIGATION** keys.

Off-white box with text indicates a selected menu item.

To select the appropriate menu item use the **UP** and/or **DOWN NAVIGATION** key.

White box with dark blue top containing text indicates some text or number needs to be given.

To supply the necessary information use the keypad and the **NAVIGATION** keys.

Dark box with question mark indicates a question that the user needs to answer to.

To supply the answer use the appropriate soft key.

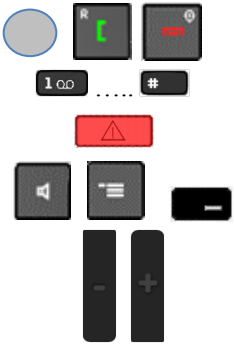

Press the indicated key.

The blue box with text indicates a soft key.

The three icons are special soft keys (available in the idle state).

Select the appropriate soft key to execute the indicated action:

Left soft key

Middle soft key

Right soft key

Use the keypad and/or the **NAVIGATION** keys to enter or change a number, date, name or text:

- Use the keypad to insert one or more digits (0 – 9, * and #) or characters
- To delete a digit or character use soft key Clear
- Use the Navigation keys to move the cursor to the insertion point
- Use the Up or Down Navigation key to increase or decrease the value of the selected field

Use (one of) the **NAVIGATION** keys

Use **LEFT** and/or **RIGHT NAVIGATION** key

Use **UP** and/or **DOWN NAVIGATION** key.

n	Press (soft) key displayed one or more times
Optional step(s):	The following step(s) is (are) optional (and marked by a blue line), i.e., • they can be skipped by the user OR • they are not offered to the user.
→❶	Used when the following actions (steps) depend on some condition. The condition is preceding the arrow, and the next action to be taken is marked by the indicated number (here: ❶). All actions belonging to set of actions to be taken, are marked by an orange line at the beginning of the actions.

General functions

Switching the handset on

1.

Switching the handset off

1. >
2. Yes

Key lock

Attention: You can dial 911 and 112 when the key lock is active. The key lock does not affect the **SOS** key.

Locking

1.
2.

Also automatic keypad lock can be set from the Settings menu.

Unlocking

1.
2.

Also automatic keypad lock can be set from the Settings menu.

Call features

Make a call

Dialling a number

1.
2. Enter/edit: Number

Using Predial mode

1. Enter/edit: Number
2.

Using Central or Private Directory[1]

1. Or

Optional step(s):

2. Enter the first character(s) of the required name
3.

4. Select: required contact

Optional step(s):

5. Select: appropriate number
6. Or

[1] Central Directory is only available if it is provided by your communication system or using the Central Directory Access Connector.

Using Speed dial

1. 0 .... 9 WXYZ

   Or – Long press (G577)

Making an emergency SOS call (G577)

See also Configuring emergency or SOS calls (page 101).

1. ⚠

Answering a call

Answering a call in Normal mode

1. Loudspeaker off

Or

1. Loudspeaker on

Answering a call using any key

See also Answer mode configuration (page 95).

1. , , 0 .. 9 WXYZ, *, # Loudspeaker off

   – Or

Or

1. Loudspeaker on

Auto-answering mode

See also Answer mode configuration (page 95).

To answer an incoming call no manual action is required.

Muting the ringer of an incoming call

1. Silent

Rejecting an incoming call

1. Reject

Change settings during a call

Adjusting the headset or loudspeaker volume

Volume up: Volume down:

Adjusted volume setting is saved for future calls.

Using mute during a call

Deactivate the microphone (mute)

1. Mute

Activate the microphone (unmute)

1. Unmute

Activate and deactivate the loudspeaker (toggle function)

1.

Using the loudspeaker enhances the possibility that the speech is distorted. Therefore your DECT handset is no substitute for a conference device!

Transferring a call

Dialling second destination then transfer

1.
2. Enter/edit: Number

Optional step(s):

3. Await answer
4.

Using Private or Central Directory then transfer

1.
2.  Or
3. Select

Optional step(s):`

4. Enter the first character(s) of the required name
5. OK
6. Select: required contact

Optional step(s):

7. Select: appropriate number
8. Or Call

Optional step(s):

9. Await answer
10.

Shuttle the call

To alternate between the two parties (before transfer):

1.

Calls list

Table 7: Call type icons and Call type tabs

	Call Type	
Call List	**Icon**	**Tab**
All calls	-	
Answered calls		
Dialed calls		
Missed call (unanswered or rejected)		 (One combined list)
Missed call (Caller filter)		

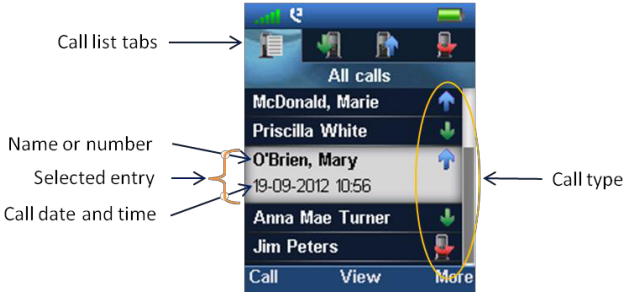

Figure 11: Call lists

Actions on the calls lists

Open Calls list

1.
2.

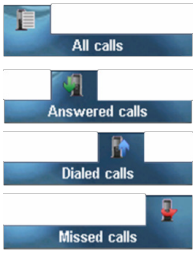

Checking the details of a call

Open Calls list: Or Or Or

1.
   View
   Select: required entry
2.
3. n

Dialling the number of the call list entry

Open Calls list: Or Or Or

1.
   Select: required entry
2. Or Call

First edit then dial the number of the call list entry

Open Calls list: Or Or Or

1. Select: required entry
2. More
3. Edit before call
4. Select
5. Enter/edit: Number
6. Or Call

Transferring a name/number to your contacts list

Open Calls list: Or Or Or

1. Select: required entry
2. More
3. Save as contact
4. Select

Optional step(s):

5. Name: Jim Peters
6. Edit
7. Enter/edit: **Name**

8. Save

9.

10. Add

Optional step(s):

11. Enter/edit: Number

12. Save

Optional step(s):

13.

14. Edit

15. 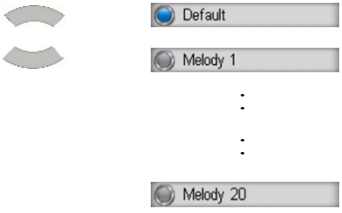

16. Select

17. Save

18.

Yes

19. n

Add a number to an existing contact

Open Calls list: Or Or Or

1. Select: required entry
2. Select
3.
4. Select
5. Select: required contact
6. 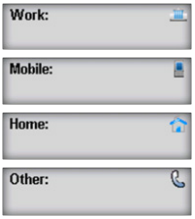
7. Edit Or Replace

Optional step(s):

8. Enter/edit: Number
9. Select
10. Select
11.

Yes

12. n

Transferring a number to the caller filter list

Open Calls list: Or Or Or

1. Select: required entry
2. Select
3. Save in caller filter
4. Select

Optional step(s):

5. Enter/edit: **Name**
6. Select
7. Yes
8. n

Deleting an entry

Open Calls list: Or Or Or

1. Select: required entry
2. More
3. Delete item
4. Select
5. Yes
6. n

Missed calls list entries will also be deleted from the list if:

- You answer a call from the to the entry related number (entry moved to the **Answered** calls list).
- You dial the to the entry related number (entry moved to the **Dialed** calls list).

Deleting all entries

Open Calls list: Or Or Or

1. Select
2. Delete all items
3. Select
4. Yes
5. n

Contacts

Adding a new contact

1.
2. More
3.

4. Select
5.

6. Edit
7.

8. Select
9. 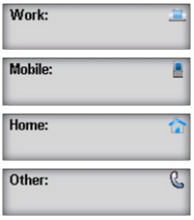

10. Edit
11.

12. Select

Optional step(s):

13.

14. Edit

15.

Note: Currently set value is marked by a blue dot ( )

16. Select

17. Select

18.

Yes

19. n

Changing information of a contact

1.
2. Select: required contact
3. Edit

Continue as in Adding a new contact (page 40) from step 5.

Deleting a contact

1.
2. Select: required contact

3. Select
4. Delete contact
5. Select
6. Yes
7. n

Deleting all contacts

1.
2. More
3. Delete all contacts
4. Select
5.

Yes
6.

7. OK
8. n

Speed dial feature

See also Using Speed dial (page 29).

Attention: Only the first number in the "chain" **Work**, **Mobile**, **Home** and **Other** assigned to the contact will be used by the **Speed dial** key.

Adding, replacing or deleting a speed dial contact

1.
2. Select: required contact
3. Select
4. Speed dial
5. Select
6. #: [3] → ❶ **add**
   → ❷ **replace**
   → ❸ **delete**
   #: John McLean

❶ add

7. Edit
8. n

❷ replace

7. Replace
8. n

❸ delete

7. Delete
8. n

[3] # = 2 .. 9, L1, L2, L3 or L4

Adding contact to the caller filter list

1.
2. Select: required contact
3. Select
4. Save in caller filter
5. Select
6.

7. Yes n

Messaging (G577)

Normal, urgent and emergency messages

The system differentiates between **Normal**, **Urgent** and **Emergency** messages.

Note: It is not possible to send an **Emergency** message from your DECT handset.

Normal messages

The melody assigned to **Notification normal** plays when you receive a normal message. If you receive a normal message during a call, a short alert tone sounds.

Urgent messages

The handset shows urgent messages immediately on the display.

The melody assigned to **Notification urgent** plays when you receive an urgent message. If you receive an urgent message during a call, a repeated short alert tone sounds.

Emergency messages

The handset shows emergency messages immediately on the display.

The melody assigned to **Notification emergency** plays when you receive an emergency message. The ringer volume increases to the maximum during the signaling process. If you receive an emergency message during a call, a repeated and in volume increasing short alert tone sounds.

Confirming receipts

You must confirm the receipt of urgent and emergency messages. If you do not confirm the message within 60 seconds, the initiator receives a message that indicates the message was not delivered.

To confirm:

Positively: Or Yes

Negatively: Or Reject

Message list full

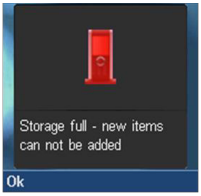

Attention:

If the display shows this warning no new message can be received. Delete some messages or change the **Overwrite old** setting to **On** – see Message settings (page 53).

Message Menu Sections

The **Messaging** menu contains a number of sections:

Table 8: Messaging Menu Sections

Description	Section
New and draft	
Inbox	
Sent messages	
Settings	

Open Message menu section

1.
2.
3. Select
4.



=

=



=

=

Actions on the messages

Reading a message

Open Message menu section: Or

1. Select: required message
2. Select

Optional step(s):

3. Scroll the text
4. n

Writing and saving a new/draft message

Open Message menu section:

1. New Or 1a. Select: required message

1b. Select

2.

3.

4.

Yes

5. n

Writing and sending a new/draft message

Open Message menu section:

1. New Or 1a. Select: required message

1b. Select

2.

3. Send

4.

5. Select

6.

Contacts → ❶
Enter number → ❷
Send to many → ❸
Central directory → ❹

❶ Contacts

7. Select
8. Select: required contact
9. Send

Optional step(s):

10. Yes
11. n

❷ Enter number

7. Select
8.

9. Send

Optional step(s):

10. Yes
11. n

❸ Send to many

7. Select
8. Select: required contact

Optional step(s):

9. Select: appropriate number
10. Send

Optional step(s):

11. Yes
12. n

❹ Central directory

7. Select
8. Enter the first character(s) of the required name
9. Yes

Optional step(s):

10. Select: required contact
11. Send

Optional step(s):

12. Yes
13. n

Forwarding a message

Open Message menu section: Or

1. Select: required message
2. Select
3. More
4. Forward

Optional step(s):

5.
6. Continue as in Writing and sending a new/draft message (page 48) from step 3.

Replying to an incoming message

Open Message menu section:

1. Select: required message
2. Reply
3.
4. Send
5. Normal Urgent
6. Select

Optional step(s):

7. Yes

8. n

Deleting a message

Open Message menu section: , Or

1. Select: required message

2. Select

3. Delete message

4. Select

5. Yes

6. n

Deleting all messages

Open Message menu section: , Or

1. More

2. Delete all messages

3. Select

4.

Yes

5. n

Saving sender to the contacts list

Open Message menu section:

1. Select: required message
2. More
3. Save as contact
4. Select
5. Continue as in Transferring a name/number to your contacts list (page 35) from step 5.

Add sender to existing contact

Open Message menu section:

1. Select: required message
2. Select
3. Add to contact
4. Select
5. Continue as in Add a number to an existing contact (page 37) from step 5.

Message settings

The following messaging options can be configured to **On** or **Off**:

- **Overwrite old** to control what happens when the handset receives a new message, but there is no room to store more messages:
  - **On**: the oldest message stored on the phone is overwritten.
  - **Off**: new message is not stored. An **Urgent** or **Emergency** message is shown on the display; a **Normal** message is rejected.
- **Sent messages** to control whether sent messages are stored in the handset (**On**) or not (**Off**).
- **Display** to control whether **Normal** messages are displayed immediately upon receipt (**On**) or not (**Off**).
- **Auto answer msg** – Please contact your System Administrator
- **Silent answer msg** – Please contact your System Administrator

Open Message menu section:

1.
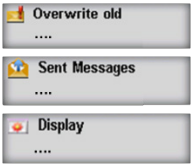

Or Or

2.

Or

3. n

Calendar (G577)

Open the Calendar

1.
2.

3. Select

Changing the calendar format (week or month view)

Open the Calendar

1. Select
2.

3. Select
4.
n

Open schedule for today

Open the Calendar

1. Select
2.

3. Select
4. View

Open schedule for a given date

Open the Calendar

1. More
2.

3. Select

4.

5. Select

6. View

Adding an appointment

Open the Calendar

1. Edit
2. 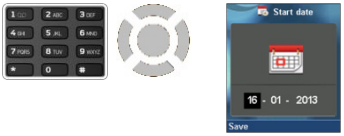

3. Select
4. 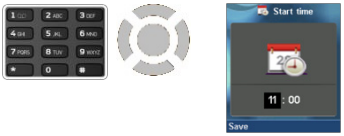

5. Select
6.

❶

7. Select

Go to step 12.

❷

7. Select

8. 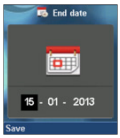

9. Select

10. 

11. Select

12.

13. Select

14.

15. Select

16.

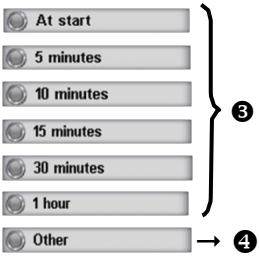

❸

17. Select

18. n

❹

17. Select
18. 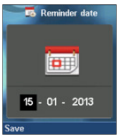

19. Select
20. 

21. Select
22. n

Open appointment

Note: Days with appointments will be marked with a red dot at the bottom right of the date.

Open the day/date of the appointment using Open schedule for today/Open schedule for a given date

1. Select: required appointment
2. View

Editing an appointment

Open appointment

1. Edit
2. Make the necessary changes like in Adding an appointment (page 56) from step 2.

Copying an appointment

Open appointment

1. Select
2. Copy
3. Select
4. Make the necessary changes like in Adding an appointment (page 56) from step 2.

Deleting an appointment

Open appointment

1. More
2. Delete
3. Select
4. 

5. Yes n

Additional features (Accessories) (G577)

Calculator

When the **Calculator** is selected the following holds:

used to insert a decimal point

used to make a percentage of the given entry

change the use of the **NAVIGATION** keys between:

- Mathematical operators
- Moving the cursor to the insertion point

1.
2.
3.

4.

5.

6.
Enter/edit: a value
7.
Enter/edit: mathematical operator (+, x, ÷ and -)
8.
Enter/edit: a value
9.
Calculate and show the result
10.
n

Stopwatch

1.
2.
3. Select
4.

5. Select

Use of the stopwatch soft keys:

Table 9: Stopwatch soft keys

Soft key	Description
Start	Start a new measurement Or Continue a stopped measurement
Stop	Halt the measurement
Lap	Save the intermediate result and continue the measurement
Reset	Reset the stopwatch (back to 0)

Alarms (alarm clock)

Open Alarms

1.
2.
3. Select
4.

5. Select

Assigning or change a daily alarm

Open Alarms

1.

Assign new

Change existing
2. Select
3. 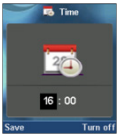

4. Save
5. n

Turning off a daily alarm

Open Alarms

1.

2. Select
3. Turn off
4. n

Assigning or change a recurrent alarm

Open Alarms

1. 

Assign new
Change existing
2. Select
3. 

4. Select

For the required days of the week:

5.

Note: (Already) selected days are marked with ☑
6. Mark Or Unmark
7. Yes

Turning off a recurrent alarm

Open Alarms

1.

2. Select
3. Turn off
4. n

Setting snooze time

Open Alarms

1.



2. Select

3.

Note: Currently set value is marked by a blue dot ( )

4. Select

5. n

Telephone settings

The **Settings** menu contains a number of sections:

Table 10: Settings Menu Sections

Description	Section
General	
Sounds - normal	
Sounds - silent	
Display	
Calls	
Connectivity	

Open Settings menu section

1.
2.
3.
4.

General settings

Table 11: General setting

Item	Description	Page
	• Switch to/from the silent “profile”	67
	• Set the current **Time & date**	67
	• Set the **Language**	70
	• Create **Shortcuts** to the handset menus and features (by pressing a navigation key)	70
	• Assign a certain condition to one of the three LEDs	71
	• Set the security settings: **Phone lock**, **Automatic keylock**, **PIN Code** and **Proxy password**	72
	• Set the **Handset name**	75
	• Set the RFID settings: **Notification**, **Destination** and **Out of LF**	75
	• Return settings to the factory values. Not affected are: **Contacts**, **PIN Code**, **Proxy password** and the system registrations	77

Status	• View handset information	77

Setting Silent

If **Silent** is **On** the handset uses the sound definitions set with the **Sounds - silent** settings, otherwise it uses the **Sounds - normal** settings.

Open Settings menu section:

1. 

2. Off Or On
3. n

Quickly toggle **Silent** setting:

1. # Long press

Setting the time and date

Note: If your communication system provides the date and time, then setting the date and time has only a temporary effect and will, in due time, revert to the by the system provided time and date.

Setting the time

Open Settings menu section:

1.

2. Select
3.

4. Select

5.

Optional step(s):

6. Format

7.

Note: Currently set value is marked by a blue dot ( )

8. Select

9. Select

10. n

Setting the date

Open Settings menu section:

1.

2. Select

3. 

4. Select

5.

Optional step(s):

6. Format

7. 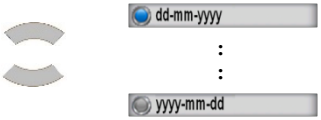

Note: Currently set value is marked by a blue dot ( )

8. Select
9. Select

10. n

Setting the language

Open Settings menu section:

1.

2. Select
3.

Note: Currently set value is marked by a blue dot ( )

4. Select
5. n

Configuring shortcuts

Shortcuts are used to get quick access to menu items.

Open Settings menu section:

1.

2. Select
3.

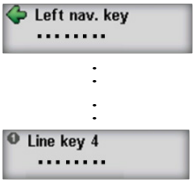

4. Select
5.

Note: Currently set value is marked by a blue dot ( )

6. Select
7. n

Configuring the LED signal

The **Red LED**, **Green LED** and **Yellow LED** can be used to indicate certain conditions to the user:

- **Missed call**
- **Text message**
- **Voice message**
- **Text or voice msg**
- **Low battery**
- **Charging**
- **Silent charging**

Open Settings menu section:

1.

2. Select
3.

4. Select

5. 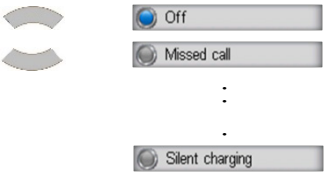

Note: Currently set value is marked by a blue dot ( )

6. Select
7. n

Security options

Setting the Phone lock feature

If the **Phone lock** is set then upon turning on your handset you'll be asked to enter the **PIN Code**.

Open Settings menu section:

1.

2. Select
3.

4. Select
5.

6. Yes
7.

Note: Currently set value is marked by a blue dot ( )

8. Select
9. n

Setting the Automatic keypad lock feature

Open Settings menu section:

1.

2. Select

3.


4. Select

5.
:

:

Note: Currently set value is marked by a blue dot ( )

6. Select

7.
n

Changing the PIN code

Open Settings menu section:

1.

2. Select

3.


4. Select

5.

6. Yes

7.

8. Yes

9.

10. Yes

11. n

Changing the Proxy password

Change the **Proxy password** that is used at SIP authentication.

Open Settings menu section:

1.

2. Select

3.

4. Select

Optional step(s):

5.

6. Yes

7.

8. Yes

9.

10. Yes

11. n

Defining the handset name

Open Settings menu section:

1.

2. Select

3.

4. Select

5. n

Resetting settings

All user determined **Settings** are set to the default factory values! Open Settings menu section:

1.

2. Select

3.

4. Yes

5.

6. Yes

7. n

View status information

Open Settings menu section:

1.

2. Select

3.

Note: In reality divided over three screens

4. Yes

5. n

Sounds (normal & silent) settings

Table 12: Sounds settings

Item	Description	Page
	Sound settings related to an **Incoming call**: • Ring volume • **Ring external** melody for calls from an external source • **Ring internal** melody for calls from an internal source • **Ring unknown call** melody for calls from an unknown source • **Group ring** melody for calls from an group source • **Intercom ring** melody for calls from an intercom source • **Emergency ring** melody for calls from an emergency call source • **ARB ring** melody for calls from an automatic ring back source • **Increasing ring** to determine whether the **Ring volume** increases gradually • **Vibrator** to define the trembler feature for calls	81
	Sound settings related to an incoming message: • **Notification volume**	83

Table 12: Sounds settings

Item	Description	Page
	• **Notification normal** melody for **Normal** messages • **Notification urgent** melody for **Urgent** messages • **Notification emergency** melody for **Emergency** messages **Increasing notification** to determine whether the **Notification volume** increases gradually • **Vibrator** to define the trembler feature for messages	
	Sound settings related to **Alerts** (for **Calendar** and **Alarms**): • **Alert volume** • **Alert melody** • **Increasing alert** to determine whether the **Alert volume** increases gradually • **Vibrator** to define the trembler feature for **Alerts**	86
	Sound settings related to: • **Key sound** for the sound that occurs when you press a key • **Confirmation sound** for the sound that indicates successful setting	88
	Configure the settings for **Noise Reduction**	90

Incoming call

Setting the ring volume

Open Settings menu section: Or

1.

2. Select
3.

4. Select
5.
Or
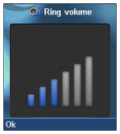

6. Yes
7.
n

Setting the ring melodies

Open Settings menu section: Or

1.

2. Select
3.


Or


Or
4. Select

5. Melody 1 : : Melody 20

Note: Currently set value is marked by a blue dot ( )

Optional step(s):

6. Play
7. Stop
8. Select
9. n

Setting the increasing ring feature

Open Settings menu section: Or

1. Incoming call
2. Select
3. Increasing ring ....
4. Off Or On
5. n

Setting the vibrator feature

Open Settings menu section: Or

1. Incoming call
2. Select

3.

4. Select

5.

Note: Currently set value is marked by a blue dot ( )

6. Select

7. n

Message notifications

Setting the notification volume

Open Settings menu section: Or

1.

2. Select

3. 

4. Select

5. Or 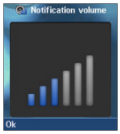

6. Yes

7. n

Setting the notification melodies

Open Settings menu section: Or

1.

2.

3. 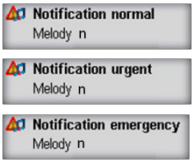

Or

Or

4.

5. 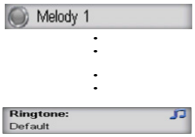

Note: Currently set value is marked by a blue dot (●)

Optional step(s):

6.

7.

8.

9.
n

Setting the increasing notification feature

Open Settings menu section: Or

1.

2.

3. 

4. Off Or On

5. n

Setting the vibrator feature

Open Settings menu section: Or

1.

2. Select

3.

4. Select

5.

Note: Currently set value is marked by a blue dot ( )

6. Select

7. n

Alerts

Setting the alert volume

Open Settings menu section: Or

1.

2. Select
3.

4. Select
5. Or 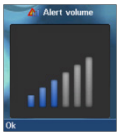

6. Yes
7. n

Setting the alert melody

Open Settings menu section: Or

1.

2. Select
3. 

4. Select

5.

Melody 1
:
:
Melody 20

Note: Currently set value is marked by a blue dot ( )

Optional step(s):

6. Play
7. Stop
8. Select
9. n

Setting the increasing alert feature

Open Settings menu section: Or

1.

Alerts

2. Select
3.

Increasing notification
....

4. Off Or On
5. n

Setting the vibrator feature

Open Settings menu section: Or

1.

Alerts

2. Select

3.

4. Select

5.

Note: Currently set value is marked by a blue dot ( )

6. Select

7. n

Feedback

Setting the key sound feature

Open Settings menu section: Or

1.

2. Select

3. 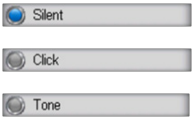

Note: Currently set value is marked by a blue dot ( )

4. Select

5. n

Setting confirmation sound

Open Settings menu section: Or

1.

2. Select
3.

4. Off Or On
5. n

Setting the coverage warning feature

Open Settings menu section: Or

1.

2. Select
3.

4. Off Or On
5. n

Setting the charger warning feature

Open Settings menu section: Or

1.

2. Select
3.

4. Off Or On
5. n

Display settings

Table 13: Display settings

Item	Description	Page
	• Select the image that is displayed on the screen of your handset in the idle state	91
	• Select the startup screen image which displays temporarily when the handset starts	92
	• Configure the periods of time after which the handset's display is dimmed and turned off	92

Selecting Wallpaper

For other **Wallpaper** than **Default**: Please contact your System Administrator

Open Settings menu section:

1.
2. Select
3.

Note: Currently set value is marked by a blue dot ( )

Optional step(s):

4. View
5.
6. Select
7. n

Selecting startup screen

For other **Startup screen** than **Default** or **NEC**: Please contact your System Administrator

Open Settings menu section:

1.

2. Select

3.


Note: Currently set value is marked by a blue dot ( )

Optional step(s):

4. View
5.
6. Select
7. n

Configuring power save

The display of your DECT Handset has three intensity levels:

- Display on;
- Display dimmed;
- Display off.

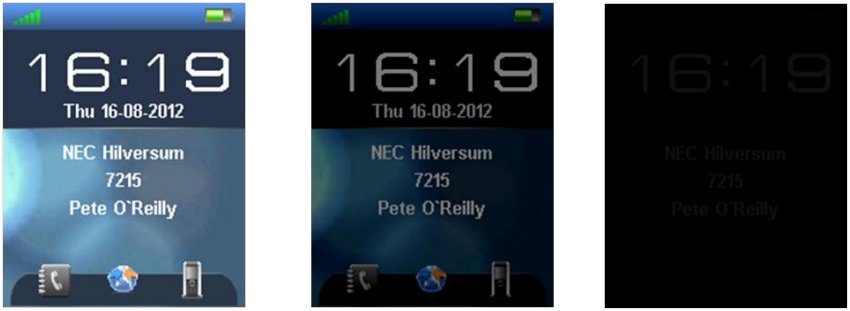

Figure 12: Display intensity levels On, Dimmed and Off

The various levels are used to save energy and are applied based

on the **Power save** setting.

Open Settings menu section:

1. 

2. Select

3. 

To never turn off the display set the second value to 0

4. Select

5. n

Calls settings

Table 14: Calls settings

Item	Description	Page
	• View information regarding outgoing **Call time** and **Message count**.	95
	• Determine how incoming calls can be answered: ○ **Normal** using Or ○ By pressing **Any key** ○ Automatically (**Auto answer**)	95
	• Selectively block or accept calls from specified callers.	96
	• Configure the **Emergency call** feature to dial a number or send a text message by long pressing the SOS key.	101
	• Determine what action is taken when the handset is called while in the charger.	115
	• Determine when a not answered call is added to the **Missed calls** list	116

Table 14: Calls settings

Item	Description	Page
	• Configure the **Voicemail number**	116

View statistics information

Open Settings menu section:

1.
2. Select
3. Or 

Optional step(s):

4. Clear
5.  Yes
6. n

Answer mode configuration

Open Settings menu section:

1. 
2. Select

3. 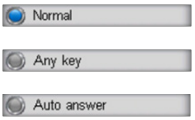

Or
Or
Note: Currently set value is marked by a blue dot ( )

4. Select

5. n

Caller filter configuration

Adding an entry to the Caller filter list

Open Settings menu section:

1.

2. Select

3.

4. Select

5. Edit

6. 

→ ❶
→ ❷
→ ❸

❶ Lookup contact

7. Select

8. Select: required contact

9. Select

10.

Yes

11. n

❷ Enter number

7. Select
8.

9. Select
10.

11. Select
12.

Yes

13. n

❸ Central directory

7. Select
8.
Enter the first character(s) of the required name
9. Yes
10.
Select: required contact

11. Select
12.

Yes
13. n

Changing a Caller filter entry

Open Settings menu section:

1.

2. Select
3.

4. Select
5. Select
6.

7. Select
8.
Select: required entry
9. Edit

Continue as in Adding an entry to the Caller filter list (page 96),
❷ - **Enter number**, from step 8

Deleting an entry from the Caller filter list

Open Settings menu section:

1.

2. Select
3.

4. Select
5. More
6.

7. Select
8. Select: required entry
9. Select
10.

Yes
11. n

Deleting all entries in the Caller filter list

Open Settings menu section:

1.

2. Select
3.

4. Select
5. More
6.

7. Select
8.

Yes
9.

10. Yes
11. n

Activating Caller filter

Open Settings menu section:

1.

2. Select
3.

4. Select

5.
   Accept list → Accept only calls from callers in the **Caller filter**
   Block list → Don't accept calls from callers in the **Caller filter**
   Filter off → **Caller filter** not used
   Note: Currently set value is marked by a blue dot ( )
6. Select
7.
   n

Configuring emergency or SOS calls (G577)

Assigning emergency call number

Open Settings menu section:

1.

2. Select
3.

4. Select
5.
   Lookup contact → ❶
   Enter number → ❷
   Central directory → ❸

❶ Lookup contact

6. Select
7.
   Select: required contact

8. Select
9. n

❷ Enter number

6. Select
7.

When no number is entered then the **Emergency call** feature is disabled
8. Select
9. n

❸ Central directory

6. Select
7.
Enter the first character(s) of the required name
8. Yes
9.
Select: required contact
10. Select
11. n

Assigning an emergency message

Open Settings menu section:

1.

2. Select
3.

4. Select
5.

To make a voice call **no Emergency call** message should be defined.

6. Select
7. n

Assigning the Silent charging feature

Open Settings menu section:

1.


2. Select
3.

→**Silent charging** not used

→ Disconnect from the system while in the charger[14]

→ Turn off the ringer (and vibrator) while in the charger

[14] If configured: redirect call to alternative destination

Note: Currently set value is marked by a blue dot ( )

4. Select

5. n

Defining the missed call time

Open Settings menu section:

1. 

2. Select

3. 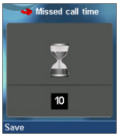

4. Select

5. n

Voicemail

Use the Voicemail feature to listen to voice messages left by calling parties[15]. You receive a voicemail in the following situations:

a. if your handset is switched off
b. if your handset is busy
c. if your handset is out of the coverage area

A new voice message dialogue appears only once, i.e., when a caller leaves a first new message in the mailbox. A voicemail

[15] Your communications system needs to support the Voicemail feature

symbol ( ) appears in the icon line; it disappears after you play the message.

Assigning the Voicemail number

Open Settings menu section:

1.

2.

3.

4.

5. n

Connectivity settings

Table 15: Connectivity settings

Item	Description	Page
Register	• Register handset to a DECT system Please contact your System Administrator	-
Deregister	• Remove registration your handset from a DECT system Please contact your System Administrator	-
Network select	• Select which DECT system is to be used (only if the handset is registered to more DECT systems)	118
Bluetooth	• Enable/Disable Bluetooth connectivity for pairing a Bluetooth headset.	119

DECT system selection

Open Settings menu section:

1.

2.

3.

→ Handset selects DECT system automatically

→ Select: required DECT system (here e.g., **NEC Hilversum**)

Note: Currently set value is marked by a blue dot ( )

4. Select

5. n

Bluetooth settings (G577)

Table 16: Bluetooth headset status

Icon	Description
	Connected
	Disconnected
	In conversation

Enable Bluetooth

Open Settings menu section:

1. Bluetooth

2. Select

3. Enable/disable
Disabled

4. Select

5. 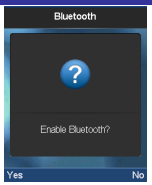

6. Yes

7. n

Disable Bluetooth

Open Settings menu section:

1.

2. Select

3.

4. Select

5. 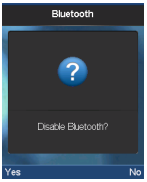

6. Yes

7. n

Pairing a Bluetooth headset

Open Settings menu section and Enable Bluetooth:

1.

2.

3. Start pairing mode on your Bluetooth headset – refer to your headset documentation.

4.

5.

6. 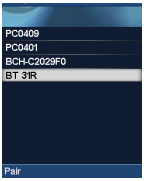

Select: required headset (e.g. BT 31R)

7.

8. 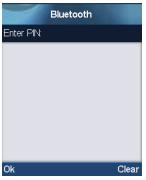

Headset PIN Code!

8.

9. n

Connecting a paired Bluetooth headset

Open Settings menu section:

1.

2. Select
3.

4. Select
5.

Select: required headset (e.g. BT 31R)
6. Connect
7. n

Disconnecting a paired Bluetooth headset

Open Settings menu section:

1.

2. Select
3.

4. Select
5.

Select: required headset (e.g. BT 31R)
6. Disconne..
7. n

Renaming a paired Bluetooth headset

Open Settings menu section:

1.

2. Select
3.

4. Select
5.

   Select: required headset (e.g. BT 31R)
6. More
7.

8. Select
9.

10. Select
11.
    n

Retrieve information for a paired Bluetooth headset

Open Settings menu section and Enable Bluetooth:

1.

2. Select
3.

4. Select
5.

Select: required headset (e.g. BT 31R)
6. More
7.

8. Select
9.

10. Yes
11. n

Delete a paired Bluetooth headset

Open Settings menu section:

1.
2. Select
3.

4. Select
5.

Select: required headset (e.g. BT 31R)
6. More
7.

8. Select
9. 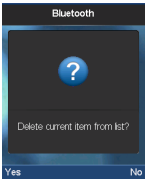

10. Yes
11. n

Delete all paired Bluetooth headsets

Open Settings menu section:

1.

2. Select
3.

4. Select
5.

Select: required headset (e.g. BT 31R)
6. Select
7.

8. Select
9. 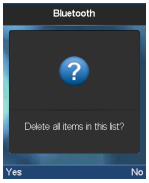

10. Yes
11. n

THIS PAGE IS INTENTIONALLY LEFT BLANK