






# NORTEL NORSTAR

Norstar ICS  
Hospitality Features Card

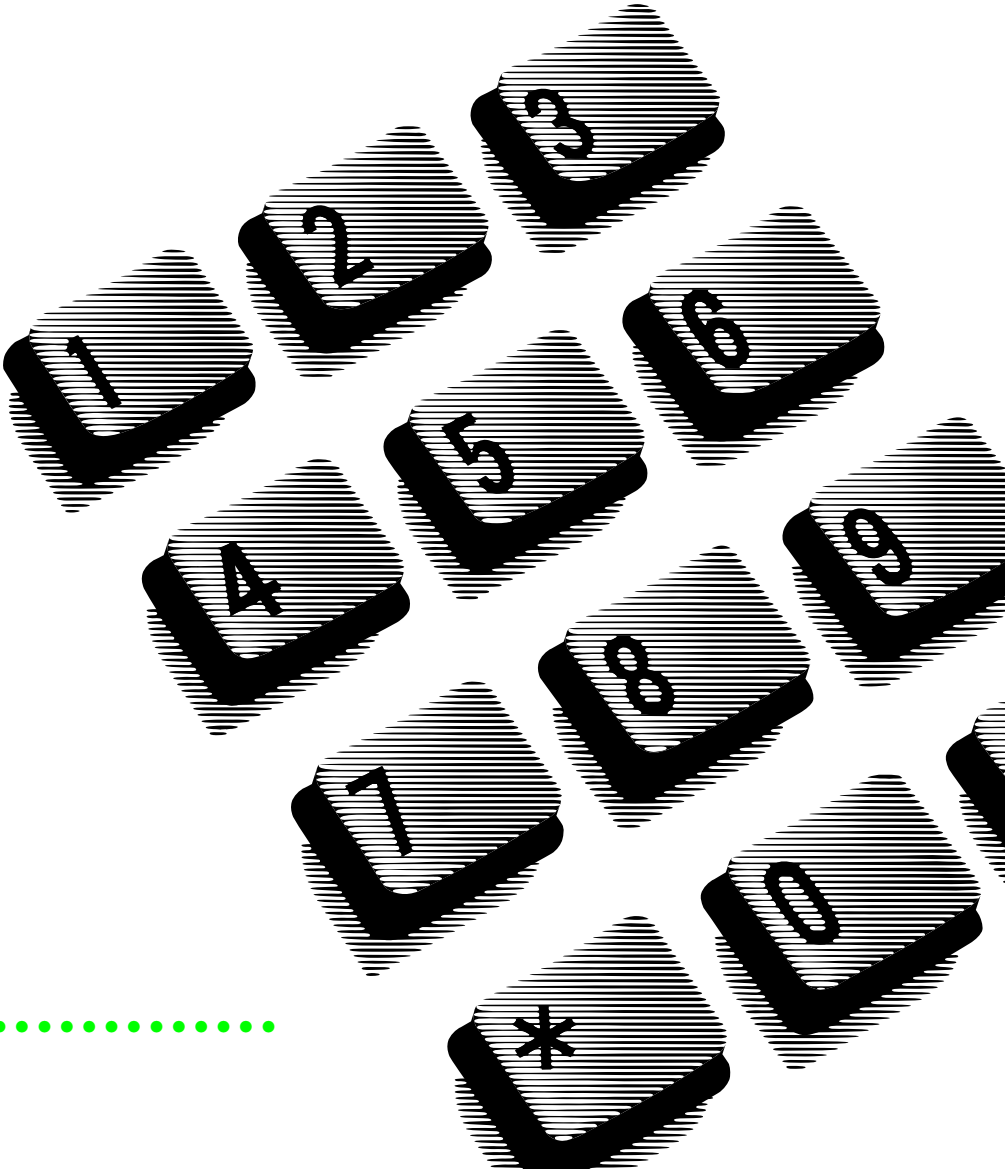

# Hospitality features

This card shows the Business Series Terminals buttons. The table below shows which buttons to use on the different types of Nortel Networks telephones.

Button Name	T7100, T7208, T7316	M7100, M7208, M7310, M7324
Feature		<input type="text" value="Feature"/>
Hold		<input type="text" value="Hold"/>
Volume Control		<input type="text" value="Volume Control"/>
Release		<input type="text" value="Rls"/>

Hospitality Services (HS) is a group of features that increases the value of the system in small to medium sized facilities such as hotels, motels or hospitals. In a hotel setting, guests gain improved services through immediate access to basic functions like wake-up service or reminders, and accurate tracking of the room's service requirements.

System telephones are classified as one of three types of sets:

## Common set

- A common set can be a telephone found in a lobby, office, or common area. It is not associated with a room and does not have access to all of the hospitality services features.
- Any system telephone or analog telephone connected to an Analog Terminal Adapter (ATA), or an Analog Station Module (ASM).

## Room set

- A Room set is a set assigned to a room. It can be any system telephone or an analog telephone connected to an ATA or an ASM. Up to five sets can be assigned to the same room (they all share same room number).

## Hospitality Services (HS) admin set

- An HS admin set is any two-line display system telephone. An HS admin set can be programmed to require a user to enter the Desk admin password before access to HS admin features is granted.

**Note:** Initial configuration of sets is programmed in system programming.

---

## Alarm time

**Cancel**

The Alarm time feature provides an alarm clock capability on system set and analog telephones connected to an ATA or an ASM. Both room sets and common sets can be programmed to sound an audible alert at a requested time. One Alarm time within a 24 hour period is programmable on a room or common set and must be reset daily. When the alarm sounds, all sets in a given room alert. Canceling the alarm on any set cancels the alarm on all the sets in the room. A new Alarm time entered on a room or common set overwrites any alarm set previously.

To program the Alarm time feature on an system telephone:

1. Press    . The display shows **Alrm: 07:00am OFF**.

If the alarm time is correct press **ON/OFF**. The display shows **Alrm:07:00am ON**.

Press **ONE** to exit.

or

To enter a new alarm time press **CHG**. The display shows **Enter time:**.

Enter a new 4 digit alarm time.

If the 24 hour clock format is used (hour: 00 to 23 and minutes: 00 to 59), no confirmation is required. The display shows **Alrm ON hh:mm**.

If the 12 hour format is used, the display shows **hh:mm AM or PM?**. Press the **AM** or **PM** display key. The display shows **Alrm ON hh:mm**.

---

## Alarm time: analog phone

To program the Alarm time feature on an analog telephone:

1. Press     . A tone sounds.

2. Enter a 4 digit alarm time.

If the 24 hour clock format is used (hour: 00 to 23 and minutes: 00 to 59), a tone sounds.

If the 12 hour format is used, press  to select am or  to select pm. A tone sounds.

At the selected times, sets in the room ring to wake-up or remind the occupant of the next event or meeting.

---

## Cancel the alarm

To cancel the Alarm time on a system telephone, press     .

The display shows **Alrm OFF**.

To cancel the Alarm time on an analog telephone press     .

---

## Turn off the alarm

When a set rings at the selected time, the occupant can release the Alarm ring as follows:

On a system telephone, press any button except the  button.

On an analog telephone lift and replace the handset back into position.

---

---

**Alarm time:**

☎ 8 7 7

**HS admin set**

Only an HS admin set can use the Hospitality Services admin alarm feature. The HS admin alarm feature is room oriented only, it does not control the alarms on common sets.

The HS admin alarm feature can:

- query the current or last alarm time set for a room
- overwrite previous Alarm time programming for a room on the system
- assign an Alarm time for any room on the system
- change an Alarm time for any room on the system
- cancel an Alarm pending for any room on the system

To program the Alarm time for a room with the HS admin alarm feature:

1. Press ☎ 8 7 7 on a two-line display system telephone.
2. If configured, the display shows **PASSWORD:**. Enter the Desk admin password.
3. The display shows **AL of rm#:**. Enter the room number.
4. Press **VIEW**. The display shows **ALRM: 07:00AM OFF:**. If the alarm time is correct press the **ON/OFF** display key to activate the alarm.
5. Enter a four digit alarm time.

If the 24 hour format is used (hour: 00 to 23 and minutes: 00 to 59), no confirmation is required. The display shows **ALARM hh:mm ON**.

If the 12 hour format is used, the display shows the four digit time plus **AM** or **PM?**. Press the **AM** or **PM** display key. The display shows **ALARM hh:mm AM or PM ON**.

6. Press the **☎** button to exit programming.

---

**Room condition**

Room set ☎ 8 7 6

HS admin set ☎ 8 7 8

The Room condition (RC) feature allows users to exchange information about the serviced state of a room. The RC feature is available from a room set or an HS admin set.

**Room sets** can:

- set the associated room's state to Service done (**SrvC done**)
- set the associated room's state to Needs service (**Needs srvc**)
- query the state of the associated room on a set with a display.

**HS admin sets** can:

- set any room's state to Service done (**SrvC done**)
- set any room's state to Needs service (**Needs srvc**)
- query the state of any room.

The system changes the state of occupied rooms to Needs service on a daily basis at a set time as configured in the system.

Maintenance personnel program the condition of the room to Service done when service in the room is complete.

The front desk attendant can query or program the condition of a room with an HS admin set. The system automatically assigns the status of a room to **Needs srvc**, when a Room occupancy status changes from occupied to **Vacant**.

---

---

## Room condition: Room set

To update the Room condition using a room set:

1. Press **[\*] 8 7 6** on a system telephone or press **[Link] [\*] 8 7 6** on an analog telephone.
2. At the prompt, enter the status of the room.
3. Press **[1]** on the dial pad to indicate **Set to srv done**. If required, enter the Room condition password.  
or,  
Press **[2]** on the dial pad to indicate **Set to needs srv**. If required, enter the Room condition password.
4. The display shows **Set to srv done** or **Set to needs srv**.

---

## Room condition: HS admin set

To update or query the Room condition using an HS admin set:

1. Press **[\*] 8 7 8** on a two-line display system telephone.
2. If configured, the display shows **Passwrd#:**. Enter the Desk admin password.
3. The display shows **Cd of rm#:**. Enter the room number and press OK.
4. The display shows **rrrrr:Vacant**. Press the **CHANGE** display key and select the required status for the room set: if the room is occupied, select **Srvc done** or **Needs srvc**; if the room is vacant, select **Vacant** or **Needs srvc**.  
The default setting is **Vacant**.
5. To update or query other room sets, press the **FIND** or **NEXT** display key and return to step 3. If there are no more room sets updates or queries, press the **[END]** button to exit programming.

---

## Room occupancy

**[\*] 8 7 9**

The Room occupancy (RO) feature allows front desk operators to assign dialing restrictions to room sets, and also works with the Room condition (RC) feature. Dialing restrictions for room sets are defined in system programming. The RO feature does not apply to common sets.

To access the Room Occupancy feature and assign the state of a room set:

1. Press **[\*] 8 7 9** on a two-line display system telephone.
2. If configured, the display shows **Passwrd#:**. Enter the Desk admin password.
3. The display shows **Cd of rm#:**. Enter the room number and press OK.
4. The display shows **rrrrr:Vacant**. Press the **CHANGE** display key and select the required status for the room set: **Vacant**, **Basic**, **Mid** or **Full**. The default setting is **Vacant**.
5. To program other rooms, press the **FIND** or **NEXT** display key and return to step 3. If no more rooms require programming, press the **[END]** button to exit programming.

Programming a room to **Vacant** state cancels any outstanding alarms.

---

## Hospitality passwords

The Hospitality Services feature allows for two types of passwords to access different areas of Hospitality programming.

- The Desk password is used to access all Hospitality Services admin features.
- The Room condition password controls the ability to change the room condition.

Default passwords are created and changed in system programming.

---

Meridian and Norstar are trademarks of Nortel Networks.  
Meridian Norstar is manufactured by Nortel Networks.

P0941572 Issue 01  
Printed in Canada

